

# One:Quick Share (for LAEC 136" AIO)

## Wireless Screen Share Solution

LG One:Quick Share\* is a wireless screen sharing solution available through LG All-in-One LED, USB transmission unit(SC-00DA) for PC, and its app. With One:Quick Share, you can simply share personal PC screen to LG All-in-One LED with easy initial setup to use, as well as availability to manage LG Signage's basic functions.

### Plug and Play



### Wireless Screen Share with One Click



\* LG One:Quick Share will be packaged in box from Sep 2021

### User PC

### Transmit Unit

### LAEC webOS based LED Signage Built-in Receive Unit



- Windows
- macOS

USB



**Model : SC-00DA**  
✓ Simple  
✓ Easy  
✓ Usability

Wireless  
Connection



No Receive Unit



Connect to LAEC webOS based LED  
Signage without additional receive unit

# One:Quick Share (for LAEC 136" AIO)

## 1. LED Model


Current OQS applicable model is LAEC015-GN All-In-One which has webOS 4.0 platform.

- SOC Firmware version : 5.10.60 or higher

## 2. OQS Dongle

The OQS dongle that was produced in last September is using 1.0.126 FW version.

- Dongle Firmware version : 10.12.6 or higher

Design	Figures	
	Size (length)	63.8 x 63.8 x 13.5 (162 mm)
	Weigh	50 g
HW	Resolution	1920 x 1080@30Hz
	WiFi	IEEE 802.11 a/b/g/n/ac
	CPU	Cortex™-A7, 1.5Ghz
	DDR	4 G bit
	eMMC	4 G byte
	Operation Temp.	0 °C ~40 °C
	Operation humidity	0~85%
Ease of use	Power consumption(Max)	2.5W
	product composition	Receiver x
	Distance	30 M
	Supported OS	Windows(7 64bit ↑) MacOS(Yosemite ↑)
	Multi screen	4



**Model : SC-00DA**

- ✓ Simple
- ✓ Easy
- ✓ Usability

# One:Quick Share (for LAEC 136" AIO)

## 3.Usage Step (at LAEC AIO)

### ① Pairing Dongle (One time)

- The pairing step is a step in which the information of the LAEC and the dongle is linked by inserting the dongle into the USB terminal of the LAEC only once in the beginning.
- The Dongle's LED light turns green within approximately 20 seconds of connection.



### ② Change Mode (Optional)

- Push the 'input' key of remote controller and select 'Screen Share' menu at the list.
- Switch the Listen Mode to OFF in the 'Screen Share' menu.

(This setting is set to OFF by factory default. So you can SKIP it during initial setting.)



### ③ Enable SoftAP

- You need to set up the SoftAP to connect the device via a Wi-Fi connection without a wireless router.



# One:Quick Share (for LAEC 136" AIO)

## 3.Usage Step (at PC / Notebook)

### ④ Connect to PC

- Connect the OQS dongle to USB port of your PC.
- When connected to the PC, the LED on the dongle will turn yellow within approximately 30 seconds.  
(If the LED continues to remain turned off, check if the 'SoftAP' setting is turned on.)
- The screen sharing status is on standby.



### ⑤ Activate Connection

- Press the button on the dongle or Click the 'Share' on the PC App to activate connection to LAEC 136" AIO.



OR



### ⑥ Screen Share

- The LED will turn green and sharing the PC screen onto the LG Signage screen.

